

SAMSUNG

Galaxy Note8

Quick Reference Manual



Table of contents

2	Samsung Care
3	Know Your Device
5	S Pen
7	Device Setup
12	Home Screen
18	Apps
19	Calls
20	Voicemail
21	Contacts
22	Messages
24	Camera
25	Internet
26	Connections
27	Security

Samsung Care

How can we help you?

Get to know your product

- To access user manuals, tips and more visit **samsung.com/us/support**.

Ask the community

- To ask questions and get solutions from other Samsung customers visit **us.community.samsung.com**.

Contact us for support

- For hardware or software support call us at 800.SAMSUNG or visit **samsung.com/us/support/contact**.
- To find a service location near you visit **support-us.samsung.com/cyber/locator/asc_locator.jsp**.

Know your device

Front view



Back view



S Pen

The S Pen™ enables fast, accurate, and precise input while providing a natural writing experience.



Remove the S Pen to launch Air command, for quick access to handy tools.

To remove the S Pen:


- ◆ Push the S Pen inward, and then pull it out to remove it from the device.



Use the S Pen

Express yourself! Write and draw directly into emails or the calendar, as well as Word®, Excel®, PowerPoint®, and PDF documents. Capture your ideas in S Note and even write a note on the back of a picture.

- **Create note:** Quickly create short notes.
- **View all notes:** View all notes created.
- **Smart select:** Outline, crop, edit and share a screen with others.
- **Screen write:** Capture a screen, and write or draw on it.
- **Live message:** Create live messages, and GIFs.
- **Translate:** Translate and hear pronunciations.
- **Bixby Vision:** Shop and discover images, products, and places.
- **Add shortcuts:** Select an app to add to the Air command menu.

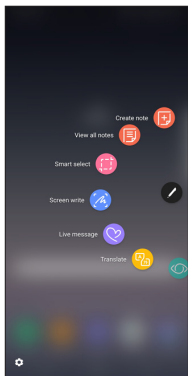

Device setup

Insert a SIM and microSD card

If you need to replace your SIM card or insert a microSD™ card, follow these steps.

1. Hold the device securely.
2. Use the SIM removal tool that came with your device to open the SIM/microSD card tray.
 - With the carrier logo facing up, place the SIM card into the tray.
 - With the gold contacts facing down, place the optional microSD card into the tray.*
3. Gently push the tray into the slot.



Note: microSD card sold separately.*

Charge the device

Before turning on your phone, charge it fully.

Your device comes with an Adaptive Fast Charging charger and a USB cable. Plug the smaller end of the cable into the USB/charger port on your device and the larger end into the charger. Then plug the charger into an electrical outlet to charge the device.



Note: Use only charging devices and batteries that are approved by Samsung. Samsung accessories are designed for your device to maximize battery life. Using other accessories may void your warranty and may cause damage.

Turn the device on and off

- To turn on, press and hold the **Power/Lock** key.
- To turn off, press and hold **Power/Lock** key and follow the prompts.

Lock and unlock the screen

Use your device's screen lock features to secure your device.

- To lock, press the **Power/Lock** key.
- To unlock, press the **Power/Lock** key and then swipe your finger across the screen.

Configure your device

When you first turn on your device, you need to set up a few things.

1. Select a language and tap **START** or **ACCESSIBILITY**.
2. Follow the prompts to complete the setup process.

Samsung Smart Switch

Easily transfer your photos, videos, music, apps and more with Samsung Smart Switch™.

Use the USB connector that came with your new device to transfer content.

Select Smart Switch during setup, or open it later from the Home screen by swiping up for **Apps** and tapping  **Settings** →  **Cloud and accounts** → **Smart Switch**.



Note: For more information and a list of compatible devices visit samsung.com/smartswitch.

Home screen


The Home screen is the starting point for using your device.



- Swipe up or down to open the Apps panel.
- Swipe the Home screen left for additional panels.
- Swipe the Edge handle to access Edge panels.
- Swipe right to open Bixby.

Customize your device

- ◆ Touch and hold a blank space on a home screen to access options.

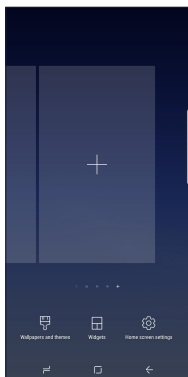


- **Wallpapers and themes:** Change the look of the Home and Lock screens with a variety of wallpapers, icons, and themes. You can also customize icons and the Always on Display screen.
- **Widgets:** Drag a widget to an empty space on the Home screen for quick access to applications.
- **Home screen settings:** Customize the look of the Home screen.

Always on

With Always On, time, date, and notifications are always displayed in standby mode, without unlocking your device.


Enable always on

- ◆ From the Home screen, swipe up for **Apps** and tap  **Settings** →  **Lock screen and security** → **Always On Display**.

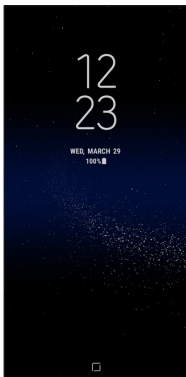

Volume and ringtones

- ◆ From the Home screen, swipe up for **Apps** and tap  **Settings** →  **Sounds and vibration**.
 - Tap **Volume** to increase or decrease device volume settings.
 - Tap **Ringtone** to select a ringtone.

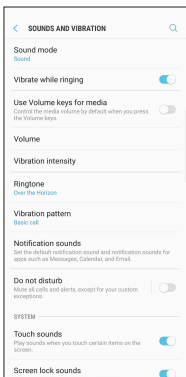

Hello Bixby

To launch **Hello Bixby** , press the **Bixby** key.

Hello Bixby allows you to quickly set reminders, create voice dictation, search and access content on your phone and on the Internet.




Note: For more information about Bixby, visit samsung.com/us/support/owners/app/Bixby.

Edge screen

The Edge screen provides a shortcut to call, text or email favorite contacts and much more.

1. From the Home screen, swipe the Edge handle to display the Edge panels.
2. Swipe left or right to view Edge screens.
3. Tap  to customize, download, and add new Edge panels.

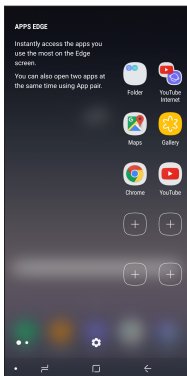

Apps

Find new apps to download and install on your device.



Play Store: Download new apps from the Google Play store.

Visit play.google.com/store/apps to learn more.




Galaxy Apps: Download Samsung apps that are optimized for use with Galaxy devices.

Visit samsung.com/global/galaxy/apps/galaxy-apps.

Calls

Make a call

- ◆ From the Home screen, tap  **Phone**.

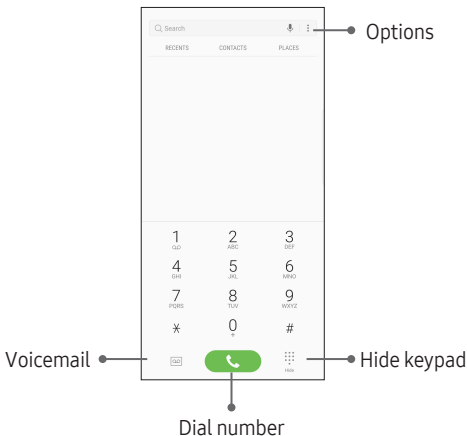

Answer a call

- ◆ From the incoming call screen, touch and slide  **Answer** in any direction.

End a call

- ◆ From the call screen, tap  **End call**.

Reject a call

- ◆ From the incoming call screen, touch and slide  **Reject** in any direction to route the call to your voicemail system.

Voicemail

Set up voicemail

1. From the Home screen, tap  **Phone**.
2. Touch and hold .

Access voicemail

1. From the Home screen, tap  **Phone**.
2. Touch and hold .

Contacts

Create a contact

1. From the Home screen, swipe up for **Apps** and tap  **Contacts**.
2. Tap  to add a new contacts.
3. Enter the desired information and tap **SAVE** to store the new entry.

Edit a contact

1. From the Home screen, swipe up for **Apps** and tap  **Contacts**.
2. Tap a contact name from the list and tap **Details** → **EDIT**.
3. Edit the desired information and tap **SAVE**.

Delete a contact

1. From the Home screen, swipe up for **Apps** and tap  **Contacts**.
2. Touch and hold a contact name from the list and tap **DELETE**.

Messages

Create and send a message

1. From the Home screen, tap  **Messages**.
2. Tap  to add a recipient.
3. Enter the recipient's phone number or email address.
4. Tap **COMPOSE** to compose a message.
5. Tap the **Enter message** field and use the keypad to enter a message.
 - Tap  **Attach** and select a file type.
 - Tap  **Emoticons** to choose an emoticon.
6. Review the message and tap **SEND**.

Gmail

Use Gmail™ to send and receive email.

Before you can access Gmail, you must first sign in or create a new Google account.

- ◆ From the Home screen, swipe up for **Apps** and then tap **Google** folder →  **Gmail**.
 - Tap **Add an email address** to create a new Gmail account or to log into an existing Gmail account.
 - Tap **TAKE ME TO GMAIL** if you have an account set up on your device.

Set up Email accounts

Configure Email for most accounts in just a few steps.

1. From the Home screen, swipe up for **Apps** and tap  **Email**.
2. Enter your email address and password into the appropriate fields and tap **SIGN IN**.
3. Follow the prompts to complete the setup.
4. Tap **DONE** to store the new account.

Camera

Take pictures and record videos with the Camera app.

Capture a photo

- ◆ From the Home screen, tap  **Camera**.
 - Tap  to take a photo.
 - Drag  left or right to zoom in or out.
 - Tap  or swipe up to take selfies.
 - Swipe right to select a mode.
 - Swipe left to select an effect.

Note: When using the camera in landscape mode, drag  up or down to zoom in or out.

Record a video

- ◆ From the Home screen, tap  **Camera**.
 - Tap  to begin recording.
 - Tap  to capture a picture while recording.
 - Tap  to pause a recording.
 - Tap  to finish recording a video.

Internet

Access the Internet with a fully-featured web browser. You can view the latest news, check the weather, and follow your stocks.


- ◆ From the Home screen, swipe up for **Apps** and tap the **Samsung** folder →  **Internet**.

Enter a URL

- ◆ From any webpage, tap the address field, enter the web address and tap **Go** on the keyboard.

Open a new tab

1. From the browser, tap  **Quick menu** →  **New tab**. A new window displays.
2. Tap  **Tabs** to view the number of windows open or to navigate between windows.*

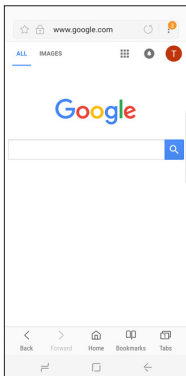

Note: The number of tabs open displays in the square. You can also tap **Tabs** → **NEW TAB** to open a new window.*

Connections

Bluetooth

1. From the Home screen, swipe up for **Apps** and tap  **Settings** →  **Connections** → **Bluetooth**.
2. Tap **On/Off** to turn on Bluetooth®.
3. Tap a device from the list to initiate pairing.
4. Enter the passkey/PIN code, if required, and tap **OK**. When connected,  displays in the status bar.

Wi-Fi

1. From the Home screen, swipe up for **Apps** and tap  **Settings** →  **Connections** → **Wi-Fi**.
2. Tap **On/Off** to turn on Wi-Fi®.
3. Tap a network and enter the password if prompted. When connected,  displays in the status bar.

Security

Screen lock

The Screen lock menu allows you to choose from a variety of locking features.

1. From the Home screen, swipe up for **Apps** and tap  **Settings** →  **Lock screen and security** → **Screen lock type**.
2. Tap a screen lock type and follow the prompts to begin registration:
 - Swipe
 - Pattern
 - PIN
 - Password
 - None
 - Face
 - Fingerprints
 - Iris*

Note: *The Iris Scanner is not intended to be used as a medical device and the biometric data collected and stored locally by the mechanism is not intended to be used for any diagnostic, therapeutic, or preventative purposes. Please follow all instructions for use of this feature. For more information, refer to the online support content or visit: samsung.com/us/irisscanner.

U.S. Cellular® Customer Care 1-888-944-9400

©2017 Samsung Electronics America, Inc. Samsung and Galaxy Note are both trademarks of Samsung Electronics Co., Ltd. Android, Google, Google Play, and other marks are trademarks of Google Inc. Other company and product names mentioned herein may be trademarks of their respective owners. Screen images simulated. Appearance of phone may vary.